TISSOT

SWISS WATCHES SINCE 1853*

Quickster Chrono Foot
G10-212

User's Manual

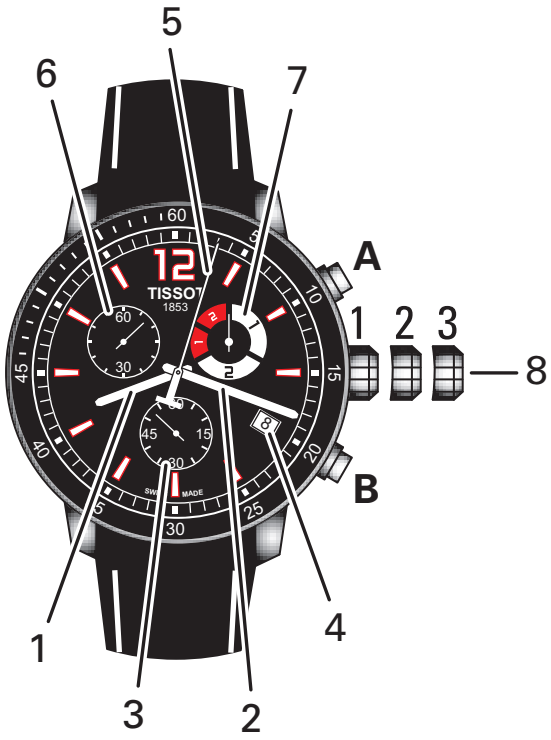

Display and functions

❶ Hour hand
❷ Minute hand
❸ Seconds hand (direct-drive)
❹ Calendar
❺ 45-minute counter
❻ 60-second counter
❼ Match phase counter

❽ 3-position crown
I Neutral position (screwed down*, not pulled out)
II Synchronisation and date setting position (unscrewed*, half pulled out)
III Time-setting position (unscrewed*, fully pulled out)

**** Models with screw-down crown:***
IA Initial position (screwed down, not pulled out)
IB Winding position (unscrewed, not pulled out)

Acknowledgements

Thank you for choosing a chronograph from TISSOT®, a Swiss brand among the most highly renowned in the world. Meticulously assembled using high quality materials and components, it is protected against impacts, temperature variations, water and dust.

This manual applies to TISSOT® Football quartz chronographs with a G10-212 movement.

Your chronograph allows you to time football matches, and offers you the following functions:
- Half counter;
- Added time counter;
- Extra time counter.

To ensure that your chronograph operates with perfect precision for many years to come, we advise you to pay careful attention to the advice given in this user manual.

Settings

Setting the time
- Pull the crown out to position **3**, and turn it forward or backward to set the desired time.
- Synchronise the small seconds hand at 6 o'clock with an official time signal (radio/TV/Internet), by pulling the crown out to position **3**; the hand will stop. Once the time is synchronised, push the crown back into position **1**.

Winding

Quartz watches do not need to be wound.

Setting the date
- Pull the crown out to position **2**, and turn it backward until the desired date is displayed.

Use

Timing a football match

The timing function allows you to time all the phases of a football match.

Note: all the timing functions are available with the crown in position **1**.

Procedure:

Press **A** to start timing from the first whistle;
- hand (1) will indicate the first half;
- hand (2) will indicate the seconds;
- hand (3) will time the minutes.

At half-time, press **A** to stop timing;
- hand (1) will indicate the first half;
- hands (2) and (3) will stop.

When the second half kicks off, press **A** to resume timing;

- hand (1) will indicate the second half;
- hands (2) and (3) will move back to the 12 o'clock position, and then start timing again.

After the end of normal time, hands (2) and (3) will indicate the stoppage time;

When the final whistle blows, press **A** to stop timing;

- hand (1) will indicate the end of normal time.

If extra time is to be played, press **A** again to start timing;

- hand (3) will move to the 9 o'clock position to measure the 15 minutes of the first half of extra time.

Reset

Note: to reset the watch, there must be no active timing.

Press **A** to stop the active timing.

Press **B** to reset the watch to time the next match.

Settings

Resetting the indicators

The football chronograph hands (45-min and 60-second) and the match phase counter hand may need to be reset if they are not in the 12 o'clock position at rest.

Pull the crown out to position **2** - the hands will move to the 12 o'clock position;

Press push-button **A** to select the hand to reset;
- the selected hand will turn through a complete revolution and return to the 12 o'clock position.

Press push-button **B** to move the hand to the correct position;
- 12 o'clock precisely.

Press push-button **A** to select the next hand;

Follow the same procedure for the 3 hands;

Push the crown back into position **1** to exit reset mode.

Water-resistance

TISSOT® watches are designed to withstand a pressure of up to 3 bar (30 m / 100 ft), 5 bar (50 m / 165 ft), 10 bar (100 m / 330 ft), 20 bar (200 m / 660 ft) or 30 bar (300 m / 1000 ft), depending on the information shown on the case-back.
A watch cannot be permanently guaranteed absolutely water-resistant. It may be affected by ageing of the gaskets or by an accidental impact on the watch. We recommend that you have your watch's water resistance checked once a year by an approved TISSOT® service centre.

Care and maintenance

Temperature
Do not expose your watch to sudden temperature changes (exposure to sunlight followed by immersion in cold water) or extreme temperatures (over 60°C (140°F) or below 0°C (32°F)).

Magnetic fields
Do not expose your watch to intense magnetic fields such as those generated by speakers, mobile phones, computers, refrigerators or other electromagnetic appliances.

Shocks and impacts
Avoid thermal shocks or impacts, since they may harm your watch. In the event of a violent impact please have your watch checked by an approved TISSOT® service centre.

Harmful products
Prevent your watch from coming into any direct contact with solvents, detergents, perfumes, cosmetic products etc., since they may damage the bracelet, the case or the gaskets.

Cleaning
We would advise you to clean your watch regularly (except for the leather strap) using a soft cloth and lukewarm soapy water. After immersion in salty water, rinse your watch in fresh water and leave it to dry completely.

Services

Like any precision instrument, a watch must be serviced regularly for optimum operation. As a general rule, we recommend that you have your watch checked every 3 to 4 years by your approved TISSOT® retailer or service centre. However, please note that depending on the climate and the conditions of use of the watch, a shorter interval may be required. To benefit from the highest standards of service and to ensure your guarantee remains in force, please always contact an approved TISSOT® retailer or service centre.

Availability of spare parts

From the stoppage date of the watch production, TISSOT® guarantees the availability of its spare parts for a minimum period of 10 years for standard watches, and for a period of up to 20 years for gold watches. If for any reason production of a particular spare part is stopped or deferred, TISSOT® reserves the right, at its sole discretion, to offer the customer an alternative solution.

Replacing the battery

TISSOT® quartz watches have the incomparable precision of quartz. Their power reserve is usually more than 2 years in continuous use (depending on how often the watch functions are used).

Replacing the battery
Once the battery has been drained, it must be replaced without delay by a TISSOT® approved service centre. Battery type: silver oxide and zinc button cell, 1.55V, no.394.

Collection and treatment of end of life quartz watches*

This symbol indicates that this product should not be disposed of as household waste. It must be returned to an approved collection point. By following this procedure you will contribute to safeguarding the environment and human health. Recycling the materials will help to conserve natural resources.

** Valid in European Community member states and in any countries with comparable legislation.*